



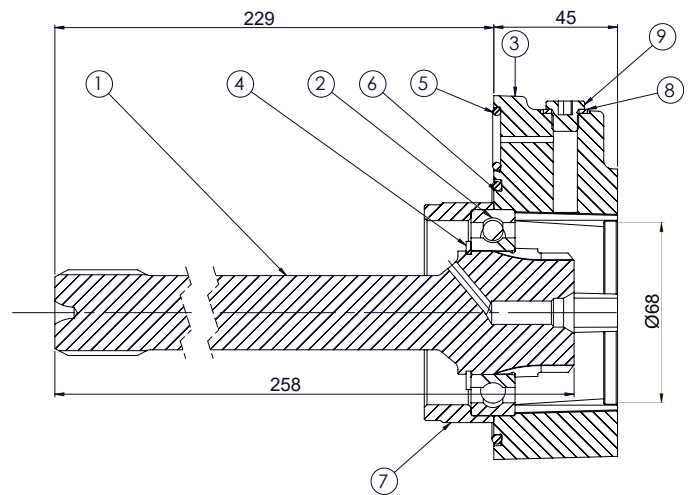

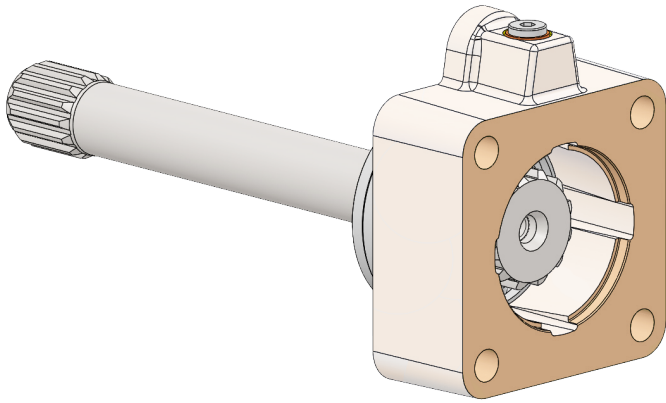



**177C004**


ADAPTOR KIT  
**ZF ECOSPLIT GEARBOX**  
WITH **INTARDER**





**INSTALLATION MANUAL**


**ADAPTOR KIT ZF ECOSPLIT WITH INTARDER**

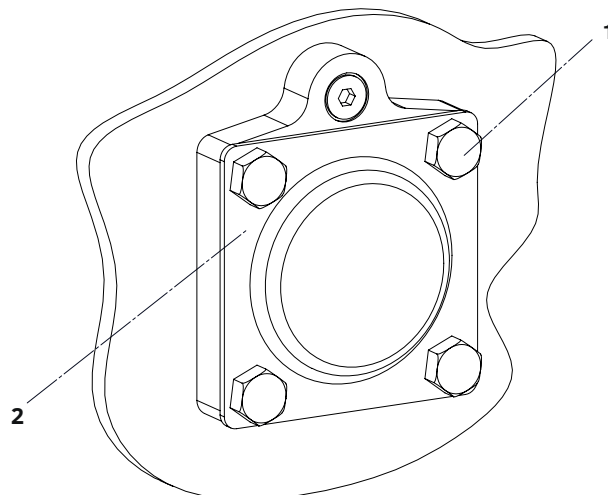






- 1)  Scaricare l'olio del cambio.  
 Drain the gearbox oil.
- 2)  Svitare le 4 viti M12 "1".  
 Unscrew the 4 M12 screw "1".
- 3)  Rimuovere il coperchio posteriore del cambio "2".  
 Remove the rear cover of the gearbox housing "2".

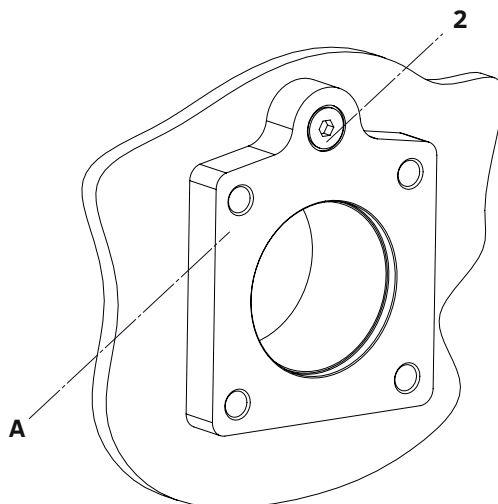




- 4)  Pulire accuratamente il piano portella cambio "A" da impurità o residui di vernice rimasti.  
 Thoroughly clean the surface of the door panel "A" from impurities.
- 5)  Rimuovere il tappo "2"  
 Remove the cap "2"



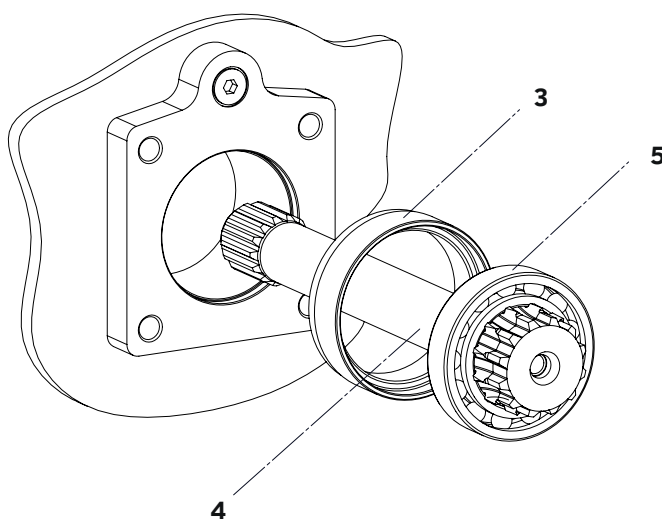


- 6)  Inserire l'anello "3" solo per i cambi senza INTARDER. Non utilizzare per i cambi marcati con la sigla 'IT'  
 Insert the ring '3' only for gear changes without INTARDER. Do not use for gears marked with the abbreviation 'IT'.
- 7)  Inserire l'albero "4" nella dentatura scanalata dell'albero secondario del cambio, prestando attenzione a non danneggiare il cuscinetto "5".  
 Insert shaft "4" into the splined teeth of the secondary shaft of the gearbox, being careful not to damage bearing "5".

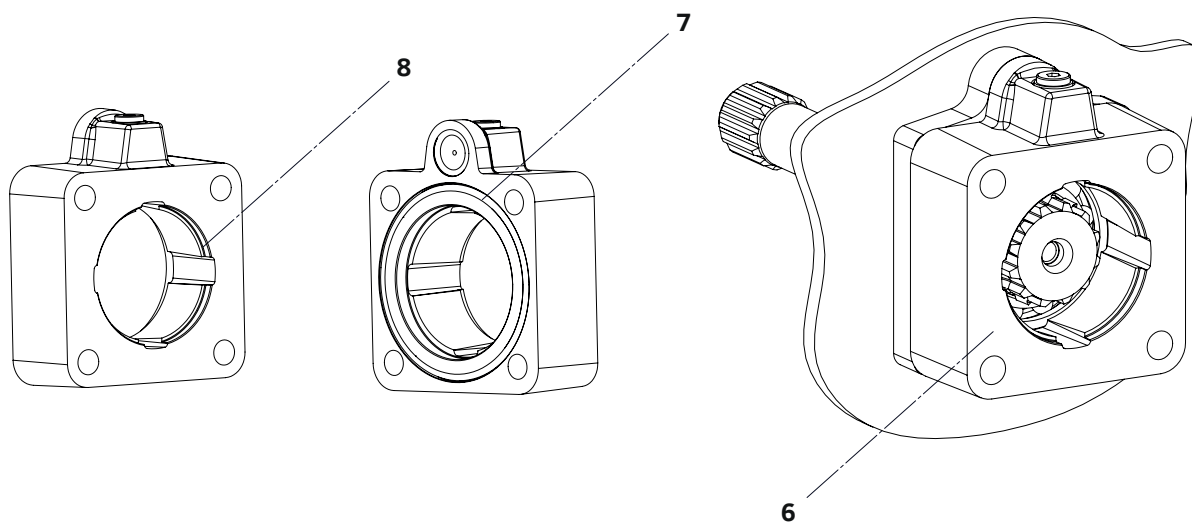

- 8)  Montare l'adattatore "6" verificando che le guarnizioni O-ring preassemblate "7" e "8" siano correttamente posizionate nelle proprie sedi.  
 Install the adapter "6" ensuring that the pre-assembled O-ring gaskets "7" and "8" are correctly positioned in their seats.



- 9)  Kit adattatore inserito. Procedere al montaggio della presa di forza.  
 Adaptor kit inserted. Proceed with the installation of the power take-off.

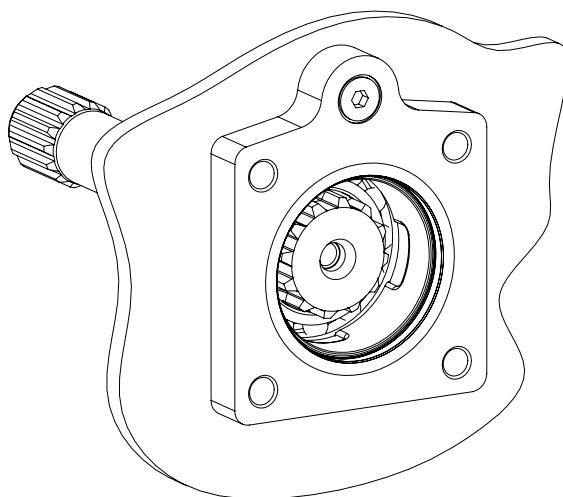

Supported by a worldwide network



## CONTACT INFORMATION

### EMEA

<b>GERMANY</b>	Hydreco Hydraulics GmbH, Straelen (NRW)	+49 283494303-41	info-de@hydreco.com
<b>ITALY</b>	Hydreco Hydraulics Italia Srl, Vignola (MO)	+39 059 7700411	sales-it@hydreco.com
<b>ITALY</b>	Hydreco Hydraulics Italia Srl, Parma (PR)	+39 0521 1830520	sales-it@hydreco.com
<b>ITALY</b>	Hydreco Srl, San Cesario S/P (MO)	+39 059 330091	cylinders@hydreco.com
<b>NORWAY</b>	Hydreco Hydraulics Norway AS, Nittedal	+47 22909410	post-no@hydreco.com
<b>UK</b>	Hydreco Hydraulics Ltd, Poole, Dorset	+44 (0) 1202 627500	info-uk@hydreco.com

### AMERICAS

<b>NORTH/LATIN</b>	Hydreco Inc / Continental Hydraulics Inc, Shakopee (MN)	+1 952 895 6400	sales@conthyd.com
--------------------	---	-----------------	-------------------

### APAC

<b>AUSTRALIA</b>	Hydreco Hydraulics Pty Ltd, Seven Hills (NSW)	+61 2 9838 6800	sales-au@hydreco.com
<b>AUSTRALIA</b>	Hydreco Hydraulics Pty Ltd, Welshpool (WA)	+61 8 9377 2211	reception-wa@hydreco.com
<b>INDIA</b>	Hydreco Hydraulics India Private Ltd, Bangalore	+91 80 67656300	sales-in@hydreco.com

